

Tow & Stow Receiver Hitch

How to calculate the drop:

How to calculate the drop you require.

A: The distance from the ground to the top of the receiver tube.

B: The distance from the ground to the coupler.

$C = \text{Drop} (A - B = C)$

